



<b>DMX Channel Assignment</b>			
<b>Channel</b>		<b>Value</b>	<b>Function</b>
<b>1</b>	<b>Color Wheel</b>	000-017	<b>White</b>
		018-033	<b>Red</b>
		034-050	<b>Amber</b>
		051-067	<b>Dark Blue</b>
		068-084	<b>Green</b>
		085-101	<b>Orange</b>
		102-107	<b>Pink</b>
		108-127	<b>Blue</b>
		128-255	<b>Color Strobe Fast-Slow-Fast</b>
		<b>2</b>	<b>Gobo</b>
021-041	<b>Sun</b>		
042-062	<b>Flower</b>		
063-083	<b>Spokes</b>		
084-104	<b>Pin Wheel</b>		
105-125	<b>Circle</b>		
126-127	<b>Stars</b>		
128-255	<b>Gobo strobe Fast-Slow-Fast</b>		
<b>3</b>	<b>Rotation</b>	000-255	<b>Gobo rotation Fast-Slow-Fast</b>
<b>4</b>	<b>Dim/Strobe</b>	000-020	<b>No Light</b>
		021-115	<b>Dark to Bright Dimmer</b>
		116-243	<b>Strobe Slow to Fast</b>
		244-255	<b>All on</b>
<b>5</b>	<b>Pan</b>	000-255	<b>540° Pan</b>
<b>6</b>	<b>Tilt</b>	000-255	<b>255° Tilt</b>
<b>7</b>	<b>Speed</b>	000-255	<b>Normal to slow speed Movement</b>
<b>8</b>	<b>Fine Pan</b>	000-255	<b>Fine pan adjustment</b>
<b>9</b>	<b>Fine Tilt</b>	000-255	<b>Fine tilt adjustment</b>
<b>10</b>	<b>Reset</b>	000-149	<b>No effect</b>
		150-255	<b>Motor reset after 10 seconds</b>
<b>IMPORTANT NOTES:</b>		<b>Channels 4 must be turned up to produce any light.</b>	

### Features

1. 30 watt LED
2. Avg. LED Lifespan 100,000hrs
3. 10 Channel DMX Control
4. 540° Pan and 255° Tilt
5. Control: DMX512, Auto, Sound Active, Master/Slave
6. 7 Color wheel
7. 6 rotating Gobos
8. Built in movement macros via Auto, Sound or DMX
9. DMX-control with any standard DMX-controller

### Specifications:

1. Voltage: AC110/60Hz or 230V/50Hz Power: 165W
2. Lamp: 30 Watt long life LED.
3. Pan: 540° Tilt: 255°
4. Dimensions: 13.75"x11.5"x11.75"
5. Weight: 11lb